


### PLAY ONLY MODE

The play only mode feature allows you to play the audio files copied from your PC to the root directory of the CF card.

 
1. Push the **POWER** switch to turn on the power or insert a CF card.

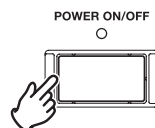

When a mp3 or wav extension file is detected in the root directory, the PMD560 automatically starts in play only mode.

A track number is assigned to each of the files in alphabetical order.

2. Push the **PLAY/PAUSE** button.



The playback starts.  
Press and cycle through the **DISPLAY/LOCK** button to see the file name.

**Note:**

Record, Mark, and Edit functions are not available in play only mode.  
The PMD560 supports wav or mp3 extension files in root directory.  
The PMD560 supports FAT32 file system and Long file name.  
The maximum number of track is 100.  
For other details, refer to the Playback Procedure (page 10) in User Guide.

### NEW PRESET ITEMS

Table of Preset Defaults (for both America and Europe)

Display	Selection range	Default settings		
		Preset 1	Preset 2	Preset 3
a. Play mode	Normal /Repeat 1 /Repeat All /Single	Normal	Normal	Normal
b. Single mode	Stop /Recue /Next	Next	Next	Next
c. Random	On /Off	Off	Off	Off
d. Power on auto	On /Off	Off	Off	Off

### DESCRIPTION

**a. Play mode**

Play Mode lets you choose what happens when the end of a track is reached during playback.

**Normal:** When playback reaches the end of a track it automatically begins the next track until all tracks on the CF card have been played. After the last track on the CF card, playback stops. The PMD560 returns to stop mode.

**Single:** When playback reaches the end of the track it automatically stops or cued according to the single mode setting.

**Repeat 1:** When playback reaches the end of the track it automatically starts playing again at the beginning of the same track.

**Repeat All:** During playback all tracks are repeated. Same as Normal except when playback reaches the end of the last track it automatically starts playback from the beginning of the first track.

1. From stop, push the **MENU/STORE/EDIT** button.
2. Turn the Jog wheel to select Preset 1, 2 or 3.
3. Push the Jog wheel to accept the selected Preset.
4. Turn the Jog wheel so Play Mode is displayed.
5. Push the Jog wheel while Play Mode is displayed. The Play Mode choice (Normal, Single, Repeat 1 and RepeateAll) is flashing.
6. Turn the Jog wheel to tab through the Play Mode choices.
7. When correct, push the Jog wheel. Display returns to Play Mode.
8. Turn the Jog wheel to select other Menu choices for editing. When editing the Preset is complete, push the **MENU/STORE/EDIT** button to store the changes, or push the **STOP/CANCEL** button to exit Menu mode without making any changes.
9. Display returns to stop mode.

**b. Single mode**

Single mode lets you choose what happens when the end of a track is reached while the single mode is selected in Play mode item.

**Stop:** The unit returns to stop mode after the track has played. The next playback starts from the first track.

**Recue:** The unit returns to the beginning of the current track and waits in Cue Mode.

**Next:** The unit advances to the next track and waits in Cue Mode

1. From stop, push the **MENU/STORE/EDIT** button.
2. Turn the Jog wheel to select Preset 1, 2 or 3.
3. Push the Jog wheel to accept the selected Preset.
4. Turn the Jog wheel so SingleMode is displayed.
5. Push the Jog wheel while SingleMode is displayed. The SingleMode choice (Stop, Recue and Next) is flashing.
6. Turn the Jog wheel to tab through the SingleMode choices.
7. When correct, push the Jog wheel. Display returns to SingleMode.
8. Turn the Jog wheel to select other Menu choices for editing. When editing the Preset is complete, push the **MENU/STORE/EDIT** button to store the changes, or push the **STOP/CANCEL** button to exit Menu mode without making any changes.
9. Display returns to stop mode.

**c. Random**

This function enables the tracks to be rearranged in a random sequence and played. The sequence will be cleared when the unit is stopped.

1. From stop, push the **MENU/STORE/EDIT** button.
2. Turn the Jog wheel to select Preset 1, 2 or 3.
3. Push the Jog wheel to accept the selected Preset.
4. Turn the Jog wheel so Random is displayed.
5. Push the Jog wheel while Random is displayed. The Random choice (ON, OFF) is flashing.
6. Turn the Jog wheel to tab through the Random choices.
7. When correct, push the Jog wheel. Display returns to Random.
8. Turn the Jog wheel to select other Menu choices for editing. When editing the Preset is complete, push the **MENU/STORE/EDIT** button to store the changes, or push the **STOP/CANCEL** button to exit Menu mode without making any changes.
9. Display returns to stop mode.

**d. Power on auto play**

Playback starts automatically after the power is turned on. The power on auto play feature can be set by following procedure.

1. From stop, push the **MENU/STORE/EDIT** button.
2. Turn the Jog wheel to select Preset 1, 2 or 3.
3. Push the Jog wheel to accept the selected Preset.
4. Turn the Jog wheel so PwOnPlay is displayed.
5. Push the Jog wheel while PwOnPlay is displayed. The PwOnPlay choice (ON, OFF) is flashing.
6. Turn the Jog wheel to tab through the PwOnPlay choices.
7. When correct, push the Jog wheel. Display returns to PwOnPlay.
8. Turn the Jog wheel to select other Menu choices for editing. When editing the Preset is complete, push the **MENU/STORE/EDIT** button to store the changes, or push the **STOP/CANCEL** button to exit Menu mode without making any changes.
9. Display returns to stop mode.